

GGM KITWIFI2CB

How to restore default system Settings




Caution : For any configuration, you need to connect an HDMI display device directly to the back of the recorder (Monitor or TV)

Load Default

Note: Restoring the default settings will not delete the recordings and images saved on the hard drive.

Go to **SETUP**, then **SYSTEM** and **MAINTENANCE** and choose **LOAD DEFAULT** Menu.

You can choose to reset all settings at once, or just settings on specific menus. Check the items you want restore, or check **Select All** to choose all items. Click **Apply** to load default settings of your chosen items.

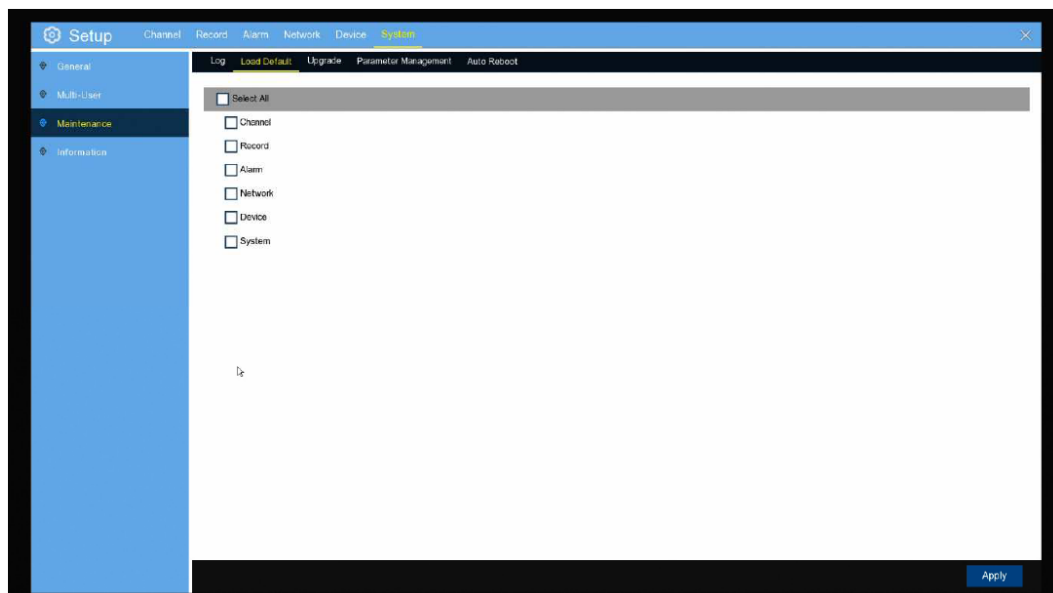

Apply. System will restart.