

## GGM KITIP24xx-48xx

### Improve Motion Detection for your cameras



#### Valid for those references :


- GGM NVRL0104
- GGM NVRL0104P
- GGM NVRL0108P
- GGM NVRE0104P
- GGM NVRE0108P
- GGM KITIP24C5MP
- GGM KITIP48C5MP

**Caution** : This method is **NOT** recommended for outdoor cameras.

For any configuration, you need to connect a monitor (HDMI or VGA) directly on the back of your recorder.

First, Enable Motion Detection for each camera.


**Setup / Channel / Motion** than **Enable**

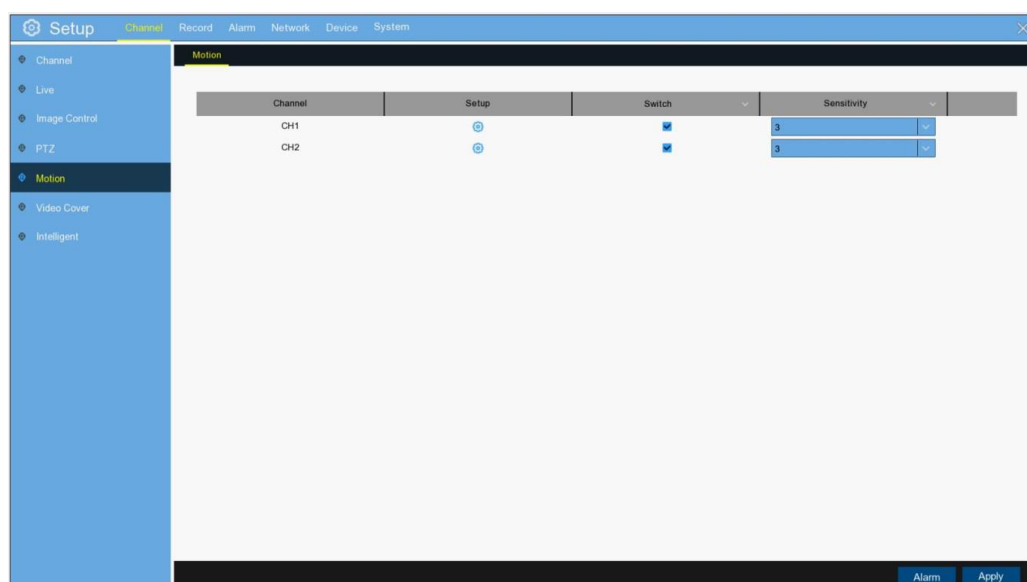


You have the possibility to adjust and accurate the Motion Detection by using 2 parameters : Sensitivity and areas (according your environment and distance between camera and your Trigger)

**Sensitivity** : Support 1 to 8 levels (8 is the highest Level)

**Area** : Set the trigger zone (**Alarm / Motion**)

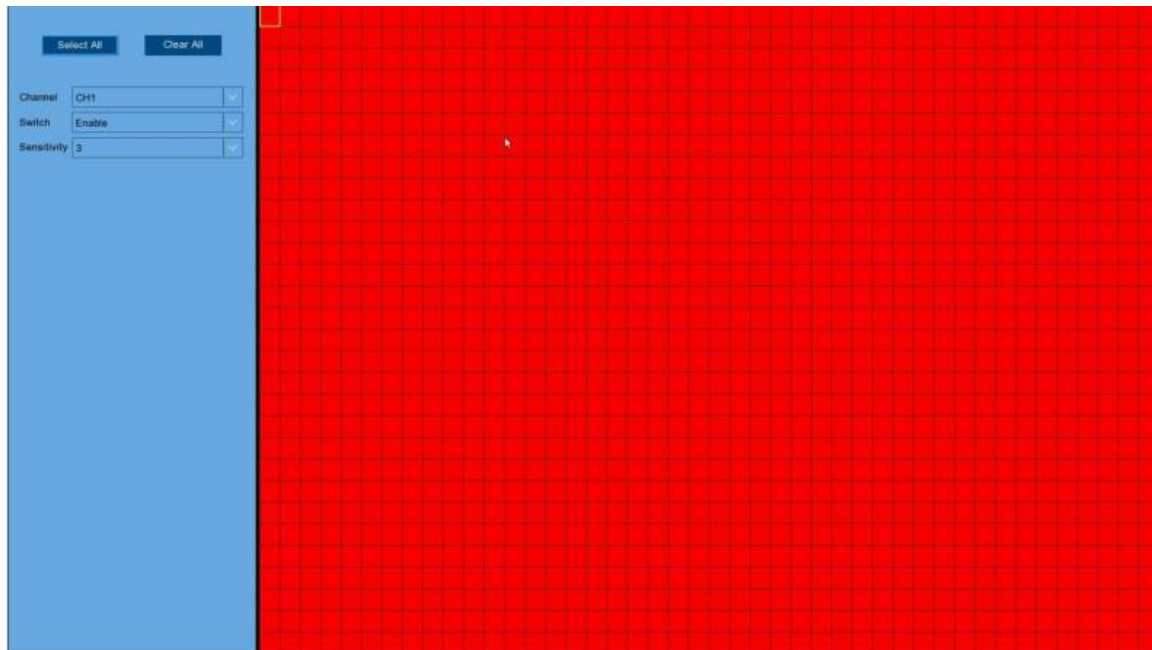

Enable or disable some areas of your camera by choosing trigger zone

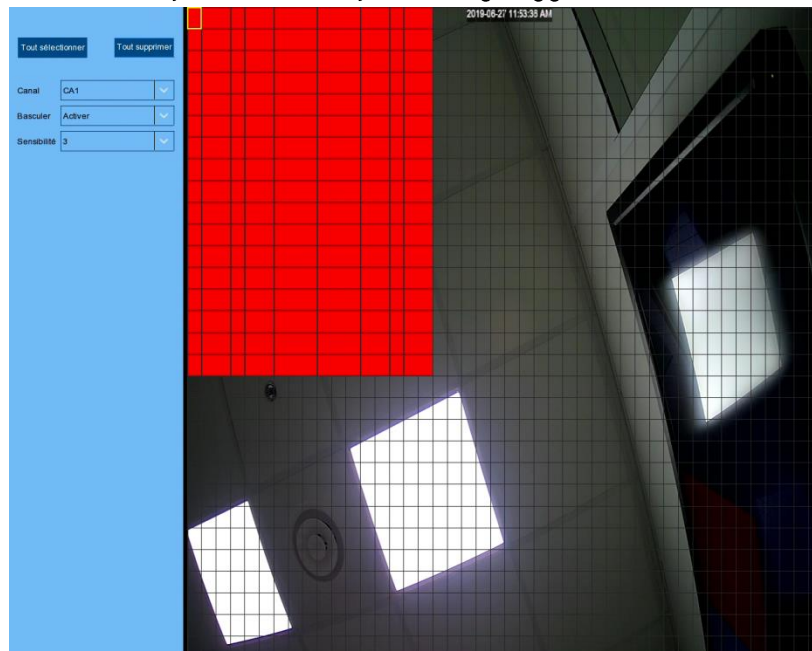

**Red areas are active areas (Motion detection enable)**

Left click to **SAVE**