



## **GGM KITIP24xx-48xx**

## How to add a camera GGM KITCAM into your recorder



## Valid for those references:

- GGM NVRL0104
- GGM NVRL0104P
- GGM NVRL0108P
- GGM NVRE0104P
- GGM NVRE0108P
- GGM KITIP24C5MP
- GGM KITIP48C5MP

First of all, you need to plug the camera and your computer on the PoE ports on your NVR

The IP address of the camera is 192.168.1.234 (or 192.168.2.234 for the older models) and the http port is **85** (you have to use **Internet Explorer**).

!!Warning!! Your computer has to be on the same subnet as the camera.

To change the IP address of your computer, you need to go on Control Panel -> Network and Sharing Center -> Manage Network Connections -> Local Area Connection -> Properties -> Internet Protocol Version 4 -> Click on Use the following IP address and write IP: 192.168.1.123 - Subnet Mask: 255.255.255.0.






Don't forget to do the opposite manipulation once you're done (Click on **Obtain an IP** address automatically)

The default username is admin and there is no password.

When you reach the home page of the camera, go on Configure -> Network.

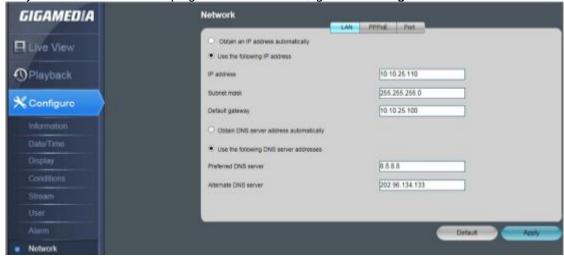


In this menu you will have to configure the new IP address of the camera and press Apply:

IP address: 10.10.25.110 Subnet Mask: 255.255.255.0 Default gateway: 10.10.255.100

## NVR:

Go to the menu Setup -> Channel -> IP Channels -> Protocol Manage

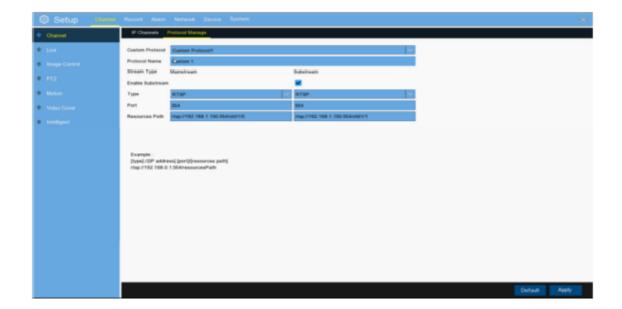






Then in Protocol Manage, please insert the information below

<u>Ex</u>: rtsp://10.10.25.110:554/MainStream (or SubStream).

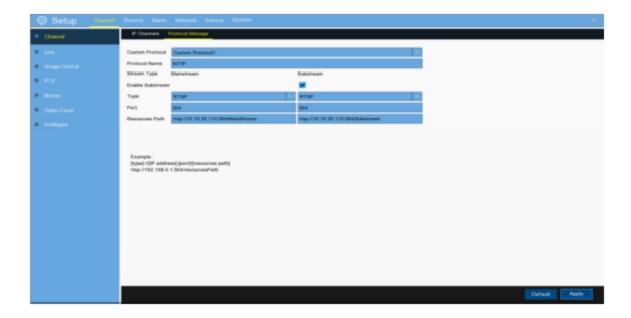

Go back to IP Channels then add the camera by selecting the protocol you configured in the previous step.

