



## **GGM KITIP24xx-48xx**

 
## **How to use Input Alarm contacts?**



## Valid for those references:


- GGM NVRL0104
- GGM NVRL0104P
- GGM NVRL0108P
- GGM NVRE0104P
- GGM NVRE0108P
- GGM KITIP24C5MP
- GGM KITIP48C5MP

You can use Input Alarm (Passive Alarm) from the rear Panel and create the scenarios you want.








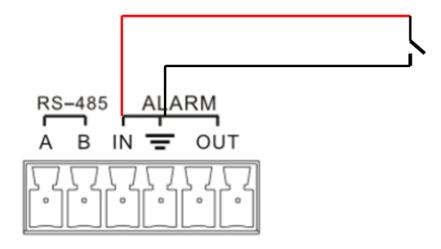

**Example 1**: You want to use Input 1 Alarm and trigger recording Channel 1 only when alarm is normally close

**Example 2**: You want to activate a siren with the output Alarm of the recorder as soon as motion detection is active on a camera.

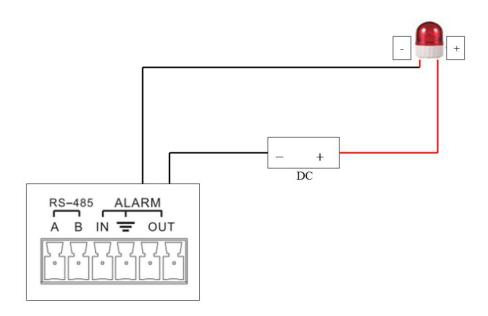

Power Limit MAX DC12V 300mA





## Go to Main Menu, then SETUP then Alarm and IO



- 1- Choose the Channel you want (IO-1 means Input Alarm 1, IO-2 means Input Alarm 2...)
- 2- Choose IO Status: Normally Open or Normally Close
- 3- Latch Time: Choose the activation time of the Input contact
- 4- <u>Actions</u>: You can decide to activate one or more actions such as Alarm Output, recording Channels, Full Screen or send Email...