

GGM WAPCD3 – How to disable the front LED ?



To remove the flashing LED in front of the terminal, you have to access to the Web Interface via IP (by default : 192.168.188.253)


=====

Video available on Youtube by searching for "GGM WAPCD3"

<https://www.youtube.com/watch?v=3fvo4pgBS64>

=====

1. Go to 2.4Ghz Advanced Configuration
2. Disable LED button
3. Apply

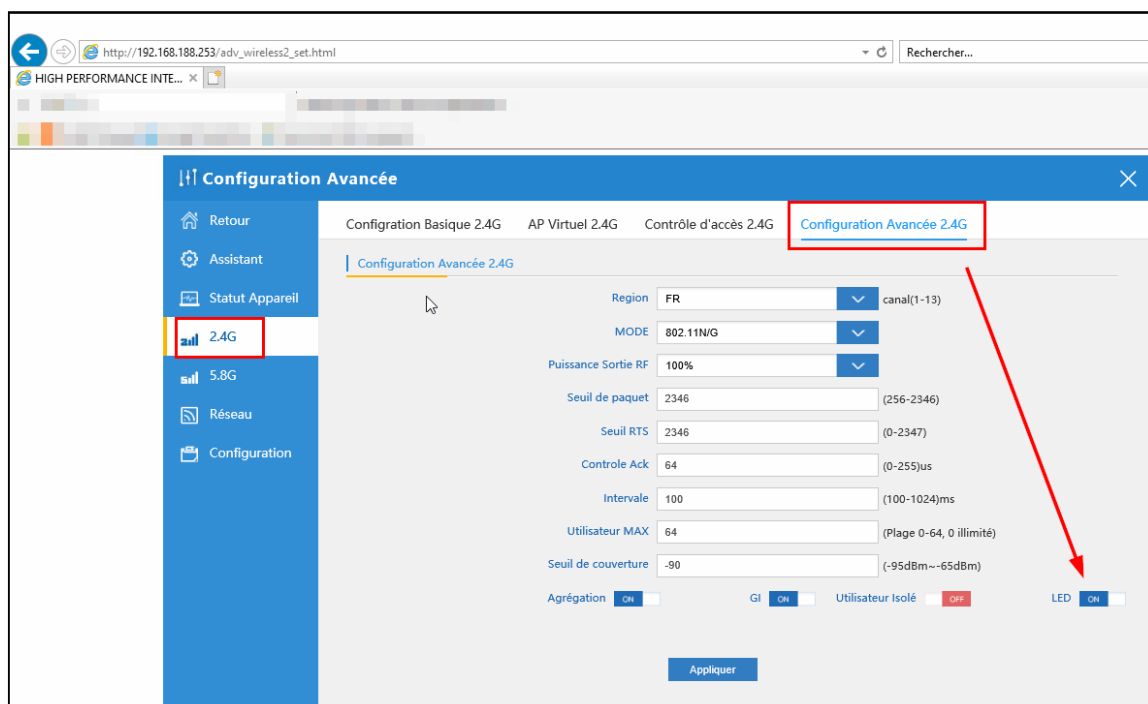

WARNING : LED is a visual indicator, it will no longer be possible to check this status of the device without going to the WEB interface